



CAFE Remote Control Features

A. TV/READ
(pre-set position)



TV/READ



RESTORE

B. Restore to Full Upright Position

C. Zero Gravity
(pre-set position)



ZERO GRAVITY



HIGH THERAPY

D. High Therapy
(pre-set)

E. Favorite Position 1



FAV1



FAV2

F. Favorite Position 2

G. Raise Backrest



BACK



LEGS

H. Rise Leg Rest

I. Backrest Recline



J. Lower Leg Rest

K. Memory Set



SET



HEAT

L. Heat On and Off



POSITIVE POSTURE®

Operating Instructions

BACK RECLINE ADJUSTMENTS (G, I)

- Press and hold the up or down button until the desired angle of recline is achieved.

LEG REST ADJUSTMENTS (H, J)

- Press and hold the up or down button until the desired leg rest position is achieved. Note that the back recline and leg rest adjustment buttons can be pressed simultaneously to achieve maximum comfort more quickly.

PRE-SET POSITIONS (A, C, D)

- The TV/Read button (A) when pressed and held will automatically position the backrest and footrest for a comfortable TV watching or reading position.
- The Zero Gravity button (C) when pressed and held will automatically position the backrest and footrest for a perfect zero gravity position which will ease pressure off the lower back.
- The High Therapy position (D) when pressed and held will automatically position the backrest and footrest for a perfect high therapy position which will help with swollen feet and legs.

RESTORE UPRIGHT POSITION (B)

- This button will restore your chair, from any position whatsoever, to its standard starting position.
- Press and hold the button to restore the chair back to the full upright, and the leg rest to the fully lowered position.

HEAT (L)

- Turns on and off heat pad in the backrest and seat area. Press once to turn on (indicated by the illumination of the orange light to the left of the heat button). Press again to turn off.

FAVORITE POSITIONS (E & F)

- Your chair can memorize two favorite (FAV) positions.
- To set your first favorite position, recline the backrest and raise the leg rest to the configuration you desire.
- Then press and hold both buttons Favorite 1 (E) and Memory Set (K) simultaneously for three seconds. You will see a green light at the top of the remote flash three times, indicating that the favorite position is set.
- Press and hold the Favorite button (I) until your favorite position is reached.
- You can update your favorite setting at any time by repeating the steps above.
- Follow steps above to set favorite 2 position, however press and hold Favorite (F) and Memory Set (J).

ADDITIONAL REMOTE CONTROL FEATURES

- To aid in the ease of use in low light environments, the remote's buttons will backlight when any button is pressed. After 30 seconds of inactivity, the backlight will dim.
- So your remote is always handy, it has a magnetized backing allowing it to attach to the outside panel of either the left or right armrest.

Customer Service: For more information on Positive Posture, please call 720-616-5000 or email us at info@positiveposture.com.